

# Fluid Cooling Industrial AOC Series

## Performance Notes

- AC motors
- Core filter
- 3/4" tubes
- Low cost
- Industrial duty
- Quiet operation
- For low flow rates
- Oil flows to 150 GPM
- Perfect for off-line recirculation loop
- Mounting brackets included
- SAE connections
- Single or three-phase 60/50 HZ motors
- Filter standard (not available on AOC-08)



**OPTIONS**  
 NPT or BSPP oil connections  
 Serviceable internal pressure bypass (not available on AOC-08)

## Ratings

**Maximum Operating Pressure**  
 300 PSI

**Test Pressure**  
 300 PSI

**Maximum Operating Temperature**  
 350°F

## Materials

- Tubes** Copper
- Fins** Aluminum
- Turbulators** Aluminum
- Fan Blade** Aluminum with steel hub
- Fan Guard** Steel with black baked enamel finish
- Cabinet** Steel with powder coat finish
- Manifolds** Copper: Model AOC-08  
 Steel: Models AOC-19 – AOC-70
- Connections** Brass: Model AOC-08  
 Steel: Models AOC-19 – AOC-70
- Nameplate** Aluminum
- Filter** Stainless frame with washable media

## Internal Pressure Bypass Options

- AOC-08**  
 Available in one pass (30 and 60 PSI), two pass (60 PSI), designs only. Valves are built into tubes and do not affect external dimensions. All steel valves. Non-serviceable.
- AOC-19 through AOC-33**  
 Available in 30 PSI or 60 PSI settings. 3/4", external, all steel valve. May be removed for servicing.
- AOC-37 through AOC-70**  
 Available in 30 PSI or 60 PSI settings. 1 1/2", external, all steel valve. May be removed for servicing.

## How to Order (AOC-08 models only)

<b>AOC</b>	-	<b>0</b> <b>8</b>	-		-		-	
<b>Model Series</b>		<b>Model Size Selected</b>		<b>Number of Passes</b>	<b>Connection Type</b>	<b>Bypass*</b>		<b>Specify Motor Required</b>
AOC - Standard				1 - One Pass 2 - Two Pass 4 - Four Pass	1 - NPT 2 - SAE 3 - BSPP	Blank - No Bypass 30 - 30 PSI 60 - 60 PSI		115/230V Single Phase No Motor

\*Bypass valve not available in Four Pass. 60 PSI only on Two Pass  
 This is a partial flow pressure bypass only. It is not designed to be a full flow system bypass.


## How to Order (Models AOC-19 through AOC-70)

<b>AOC</b>	-		-		-		-	
<b>Model Series</b>		<b>Model Size Selected</b>		<b>Connection Type</b>	<b>Bypass*</b>			<b>Specify Motor Required</b>
AOC - Standard				1 - NPT 2 - SAE 3 - BSPP	Blank - No Bypass 30 - 30 PSI 60 - 60 PSI			115/230V Single Phase 208-230/460V Three Phase 575 Volt No Motor


\*Available on One Pass only  
 This is a partial flow pressure bypass only. It is not designed to be a full flow system bypass.

# Dimensions

## Models AOC-19 through AOC-33

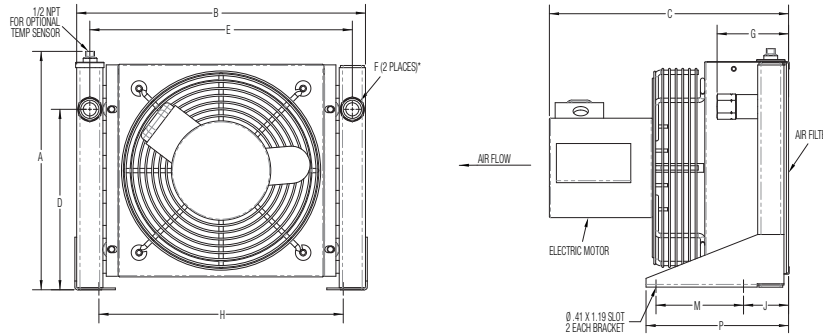

## Models AOC-37 through AOC-70

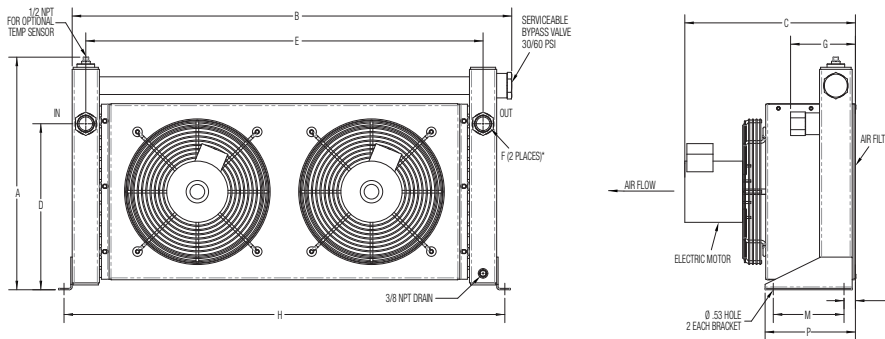

Model	A		B		C	D	E	F		G		H	J	M	P	Weight LBS	60 HZ CFM
	No Bypass	Bypass	No Bypass	Bypass				SAE	NPT & BSPP	SAE	NPT & BSPP						
AOC-19	13.62	16.00	16.50	18.16	13.08	10.31	15.00	#12	.75	3.05	4.12	13.96	2.61	5.00	8.18	19	750
AOC-22	15.62	18.00	22.00	23.66	12.19	12.31	20.50	#12	.75	3.05	4.12	19.46	2.61	5.00	8.18	33	1150
AOC-24	19.62	22.00	24.75	26.41	13.19	16.31	23.25	#12	.75	3.05	4.12	22.21	2.61	5.00	8.18	46	1900
AOC-33	25.62	28.00	30.25	31.91	13.19	22.31	28.78	#16	1.00	3.05	4.34	27.71	2.61	5.00	8.18	65	2150
AOC-37	18.50	21.38	39.00	40.38	15.66	15.25	36.50	#20	1.25	4.62	5.97	40.50	1.06	6.50	8.31	95	2150
AOC-50	22.50	25.38	41.00	42.38	15.62	19.25	38.50	#20	1.25	4.68	6.03	42.50	1.12	6.50	8.37	120	3200
AOC-54	30.50	33.28	42.00	43.38	17.09	27.25	39.50	#24	1.50	4.89	6.30	43.76	1.87	9.00	12.37	154	3800
AOC-57	36.50	39.38	48.00	49.38	16.72	32.75	45.50	#32	2.00	6.68	8.15	49.76	1.87	9.00	12.37	190	4200
AOC-70	38.38	41.25	51.00	52.38	22.62	34.00	48.50	#32	2.00	8.44	9.91	52.75	1.62	9.00	12.12	322	7500

NOTE: All dimensions in inches. We reserve the right to make reasonable design changes without notice. Inlet and outlet oil ports reversible if bypass valve option is not used.

# Specifications

## Electric Motor Data

Model	Motor HP	No. of Motors	Frame Size	Single Phase	Three Phase	575 Volt	RPM	Type	Bearings B-Ball	Thermal Overload	dB(A) 3 FT
AOC-19	1/4	1	Custom	115/230V/60/50 HZ 4.2/2.1 Amps Full Load 60 HZ 2.8/1.4 Amps Full Load 50 HZ	208-230/460V/60 HZ 190/380-415V/50 HZ 1.0/0.5 Amps Full Load	575/500V/60/50 HZ .65 Amps Full Load 60 HZ .60 Amps Full Load 50 HZ	1700 (60 HZ) 1350 (50 HZ)	TEAO	B	Yes	80
AOC-22	1/4	1	Custom					TEAO	B	Yes	80
AOC-24	1/4	1	Custom					TEAO	B	Yes	80
AOC-33	1/4	1	Custom					TEAO	B	Yes	80
AOC-37	1/4	2	Custom					TEAO	B	Yes	84
AOC-50	1/4	2	Custom					TEAO	B	Yes	84
AOC-54	1/4	2	Custom					TEAO	B	Yes	84
AOC-57	1/4	2	Custom					TEAO	B	Yes	84
AOC-70	1	2	56C	115/208-230V/60 HZ 12.8/6.4 Amps Full Load	208-230/460V/60 HZ 190/380-415V/50 HZ 3.4/1.7 Amps Full Load 60 HZ 3.6/1.9 Amps Full Load 50 HZ	575/500V/60/50 HZ 1.5 Amps Full Load 60 HZ 1.4 Amps Full Load 50 HZ	1725 (60 HZ) 1425 (50 HZ)	TEFC	B	No	90

NOTE: Amp ratings are per motor. Motors are CSA approved/marked.

# Selection Procedure

Performance Curves are based on 50SSU oil leaving the cooler 40°F higher than the ambient air temperature used for cooling. This is also referred to as a 40°F approach temperature.

**STEP 1 Determine the Heat Load.** This will vary with different systems, but typically coolers are sized to remove 25 to 50% of the input nameplate horsepower.  
(Example: 100 HP Power Unit x .33 = 33 HP Heat load.)

$$\text{If BTU/HR is known: } \text{HP} = \frac{\text{BTU/HR}}{2545}$$

**STEP 2 Determine Approach Temperature.** Desired oil leaving cooler °F – Ambient air temp. °F = Actual Approach

**STEP 3 Determine Curve Horsepower Heat Load.** Enter the information from above:

$$\text{Horsepower heat load} \times \frac{40 \times C_v}{\text{Actual Approach}} = \text{Curve Horsepower}$$

**STEP 4 Enter curves** at oil flow through cooler and curve horsepower. Any curve above the intersecting point will work.

**STEP 5 Determine Oil Pressure Drop from Curves:**  
● = 5 PSI   ■ = 10 PSI   ▲ = 20 PSI   + = 40 PSI Multiply pressure drop from curve by correction factor found in oil ΔP correction curve.

## Desired Reservoir Temperature

**Return Line Cooling:** Desired temperature is the oil temperature leaving the cooler. This will be the same temperature that will be found in the reservoir.

**Off-Line Recirculation Cooling Loop:** Desired temperature is the oil temperature entering the cooler. In this case, the oil temperature change must be determined so that the actual oil leaving temperature can be found. Calculate the oil temperature change (oil ΔT) with this formula:  
Oil ΔT = (BTU's/HR) / (GPM Oil Flow x 210).

To calculate the oil leaving temperature from the cooler, use this formula:  
Oil Leaving Temp. = Oil Entering Temp – Oil ΔT.

This formula may also be used in any application where the only temperature available is the entering oil temperature.


**Oil Pressure Drop:** Most systems can tolerate a pressure drop through the heat exchanger of 20 to 30 PSI. Excessive pressure drop should be avoided. Care should be taken to limit pressure drop to 5 PSI or less for case drain applications where high back pressure may damage the pump shaft seals.

## Oil Temperature


Typical operating temperature ranges are:

Hydraulic Motor Oil	110° - 130°F
Hydrostatic Drive Oil	130° - 180°F
Bearing Lube Oil	120° - 160°F
Lube Oil Circuits	110° - 130°F

# Performance Curves

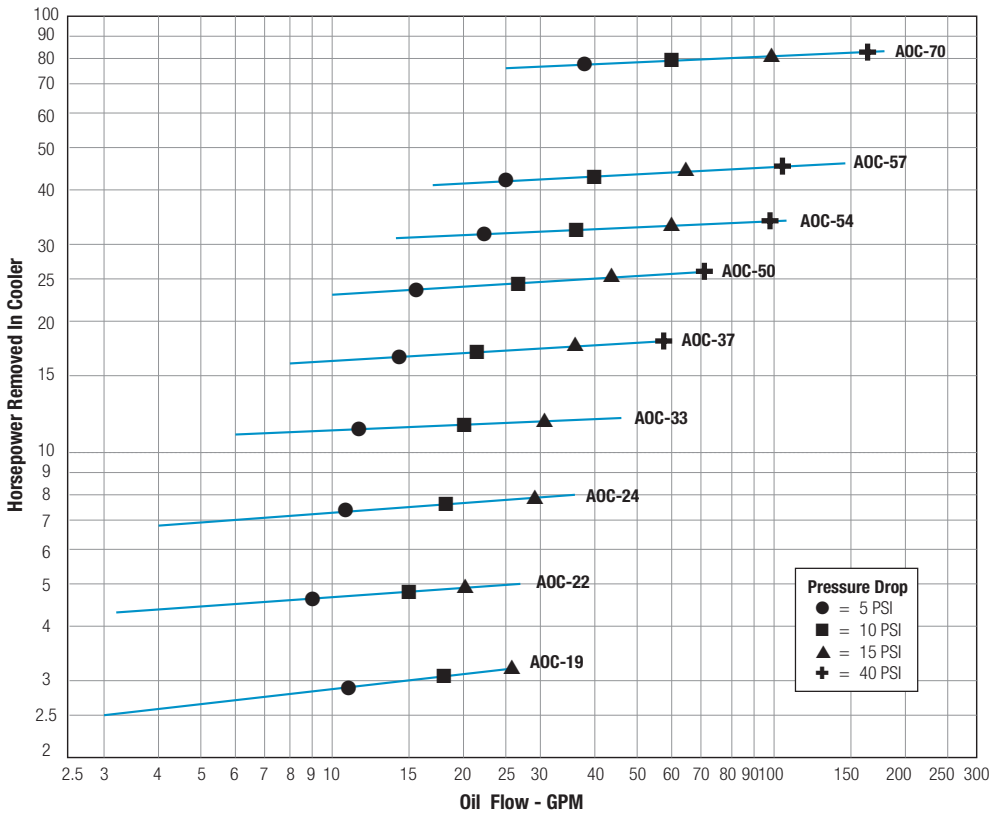

## Oil Pressure Correction

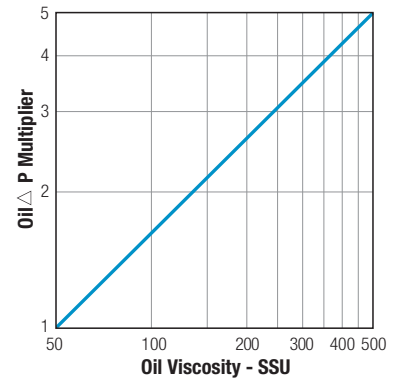



De-rate cooler performance by 10% when used in 50 HZ service.

## C<sub>v</sub> Viscosity Correction



Average Oil Temp °F	OIL				
	SAE 5 110 SSU at 100°F 40 SSU at 210°F	SAE 10 150 SSU at 100°F 43 SSU at 210°F	SAE 20 275 SSU at 100°F 50 SSU at 210°F	SAE 30 500 SSU at 100°F 65 SSU at 210°F	SAE 40 750 SSU at 100°F 75 SSU at 210°F
100	1.14	1.22	1.35	1.58	1.77
150	1.01	1.05	1.11	1.21	1.31
200	.99	1.00	1.01	1.08	1.10
250	.95	.98	.99	1.00	1.00

## AOC-08 Model Only



### One Pass

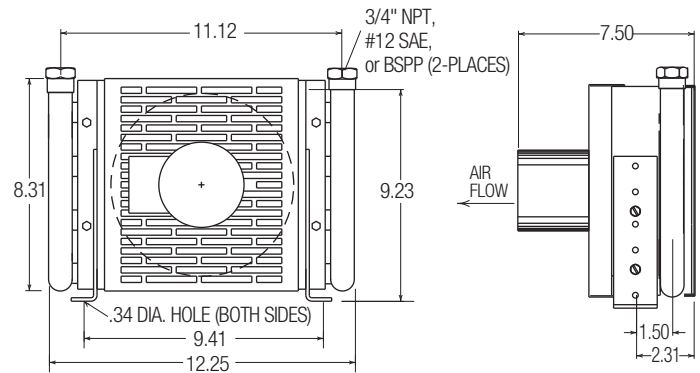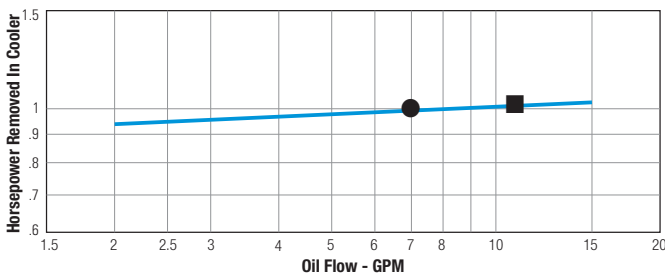

### Two Pass

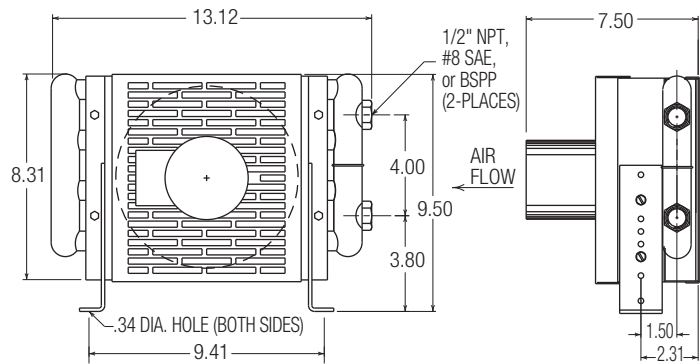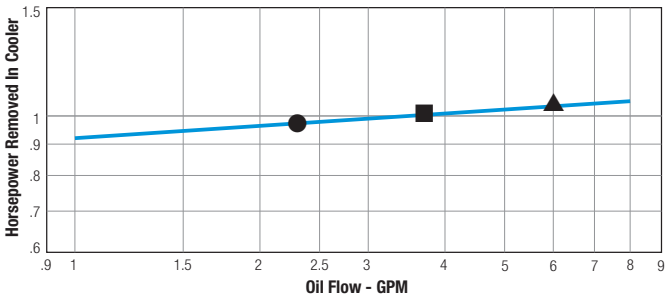

### Four Pass

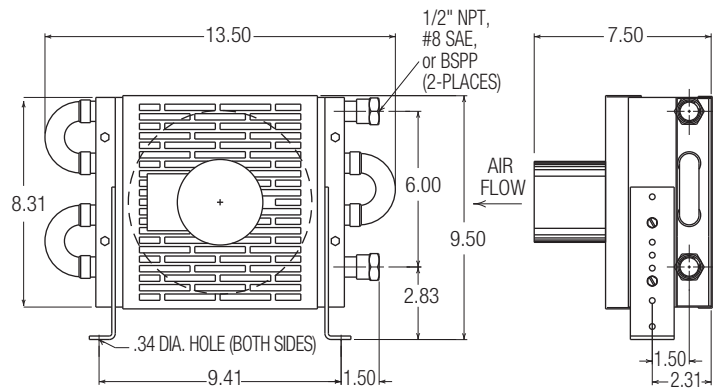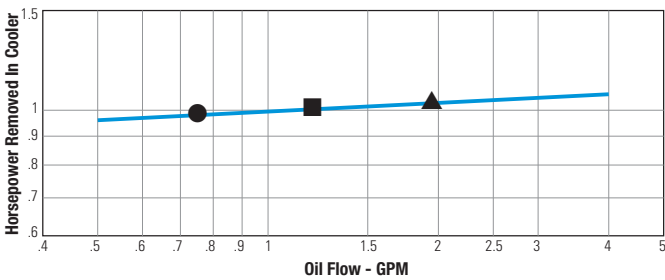

## Specifications

### Electric Motor Data

Model	Motor Power	115/230 V	50/60 HZ	Type	RPM	Bearings S-Sleeve	Thermal Overload	Shipping Weight LBS	dB(A) 3 FT	CFM 260 HZ
AOC-08	1/30	115 V 230 V	1.1 Amps Full Load .7 Amps Full Load	TEAO	3000	S	Yes	12	70	208

Read carefully before attempting to assemble, install, operate or maintain the product described. Protect yourself and others by observing all safety information. Failure to comply with instructions could result in personal injury and/or property damage! Retain instructions for future reference.

### Description

AOC series forced air oil coolers are used for high-efficiency oil cooling in hydraulic systems. Units utilize the latest in heat transfer technology to reduce the physical size and provide the ultimate in cooling capacity. By maintaining a lower oil temperature, hydraulic components and fluids work better and have a longer life expectancy.

### General Safety Information

1. Do not exceed the pressure rating of the oil cooler, nor any other component in the hydraulic system.
2. Do not exceed the published maximum flow rates as the potential can result in damage to the hydraulic system.
3. Release all oil pressure from the system before installing or servicing the oil cooler.
4. These oil coolers are not suitable for use in hydraulic systems operating with water-glycol or high water base fluids without a corrosion inhibitor suitable for aluminum and copper component protection.

### Unpacking

After unpacking the unit, inspect for any loose, missing or damaged parts. Any minor damage to the cooling fins can generally be corrected by gently straightening them.

### WARNING

*Do not exceed the maximum pressure of 300 PSI, or the maximum temperature of 350°F as oil cooler failure can occur.*

1. These hydraulic oil coolers should be installed on either the low pressure return line, or a dedicated recirculation cooling loop.
2. Turn off the hydraulic system and drain any oil from the return lines before installing these coolers.
3. A strainer located ahead of the cooler inlet should be installed to trap scale, dirt, or sludge that may be present in piping and equipment, or that may accumulate with use. A thermostatic or spring loaded bypass/relief valve installed ahead of the cooler may be helpful to speed warm-up and relieve the system of excessive pressures.

**CAUTION** *Use of a back-up wrench is recommended to prevent twisting of the manifolds when installing the oil piping. If pipe sealant is used on threads, the degree of resistance between mating parts is less, and there is an increased chance for cracking the heat exchanger fittings. Do not over tighten.*

4. Piping must be properly supported to prevent excess strain on the heat exchanger ports.

### Operation

Once unit is installed, turn the fan by hand to eliminate possible part interference because of damage in shipment or installation. Observe the fan operation upon initial startup. The system may then be operated.

### Maintenance

Inspect the unit regularly for loose bolts and connections, rust and corrosion, and dirty or clogged heat transfer surfaces (cooling coil).

### Heat Transfer Surfaces

Dirt and dust should be removed by brushing the fins and tubes and blowing loose dirt off with compressed air. Should the surface be greasy, the cooler should be brushed or sprayed with a mild alkaline solution, or a non-flammable degreasing fluid. Follow with a hot water rinse and dry thoroughly. A steam cleaner may also be used effectively. *Do not use caustic cleaners.*

### Casing Fan and Motor

Dirt and grease should be removed. Rusty or corroded surfaces should be sanded clean and repainted.

### Internal Cleaning

At least once a year, piping should be disconnected and degreasing agent or flushing oil circulated through the unit to remove sludge from turbulators and internal tube surfaces to return the unit to full thermal capacity. A thorough cleaning of the entire system in the same manner is preferable to avoid carry-over from uncleaned piping, pumps and accessories. The strainer or any filtering devices should be removed and serviced following this cleaning operation.

## Trouble Shooting Chart

Symptom	Possible Cause	Corrective Action
Not cooling adequately	Not enough air flow	Consult specifications and adjust if required
	Unit is fouled	Clean exchanger (see maintenance)
	Unit is undersized	Check specifications and change size if necessary
Leaking at connections	Not tight	Tighten carefully
	No thread sealant	Remove pipe, apply thread sealant and reinstall